

UNDERCOVER LED KIT *USER MANUAL*

CONTENTS

LED LIGHTHEAD x 2pcs

EXTENSION CABLE


LED FLASHER & CABLE



GASKET x 2pcs
SCREW x 4pcs



INSTALLATION

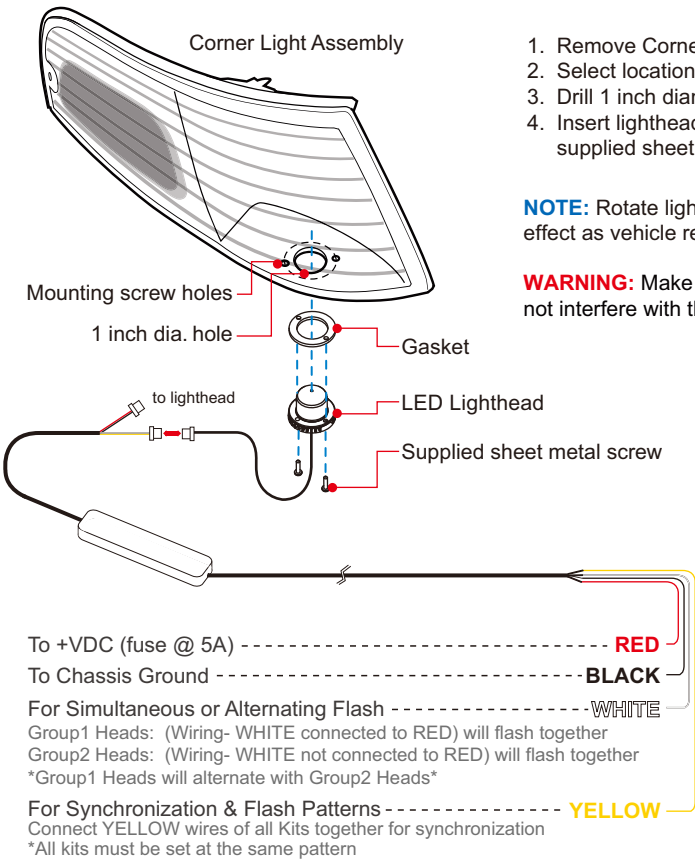

1. Remove Corner/Head/Tail light from vehicle.
2. Select location to mount LED lighthead.
3. Drill 1 inch diameter hole.
4. Insert lighthead into hole and secure with supplied sheet metal screws.

NOTE: Rotate lighthead to achieve optimum effect as vehicle reflectors may vary.

WARNING: Make sure the LED lighthead does not interfere with the operation of vehicle lights.

FP#	Flash Patterns
0	Random
1	Single (split)
2	Double (split)
3	Quad (split)
4	Quint (split)
5	Mega (split)
6	Ultra (split)
7	Single-Quad (split)
8	Single H/L (split)
9	Single (all)
10	Double (all)
11	Quad (all)
12	Quint (all)
13	Mega (all)
14	Ultra (all)
15	Single-Quad (all)
16	Single H/L (all)
17	Steady 2 (CA)
18	Steady 4 (all)

*SPLIT = Head1 alternate Head2
*ALL = Head1 & 2 Simultaneous


Momentarily apply +VDC to YELLOW wire:
· once for next pattern
· quickly three times for reset

NOTE: This unit may not be factory set at FP# 0

WARNING: Do not connect lighthead directly to power. It will cause damages and void warranty.

WIRING (illustration of wiring 2 kits together)


In this configuration, Unit1 heads will alternate with Unit2 heads.

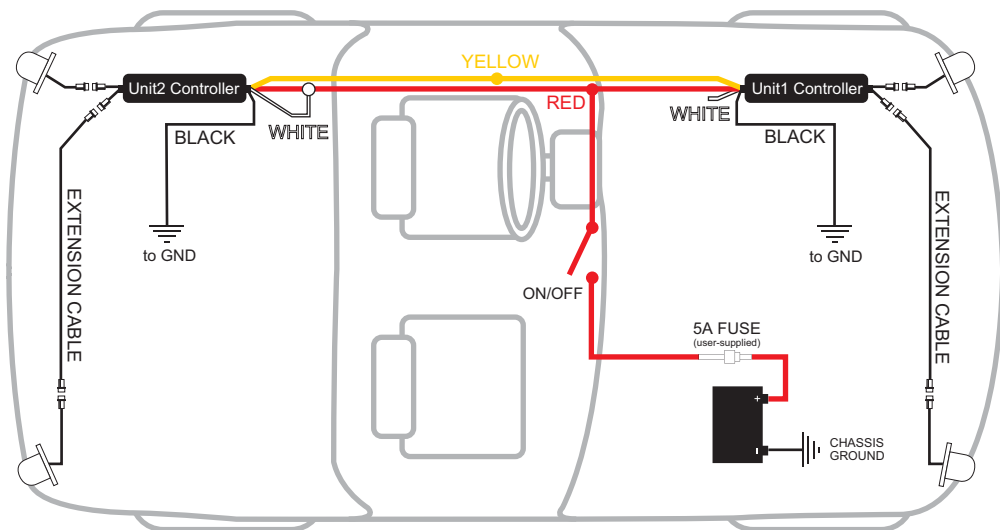


NOTE: Illustration not to scale.

WIRING (illustration of wiring to existing strobe cables)

In this configuration, existing strobe extension cables are used to facilitate installation.

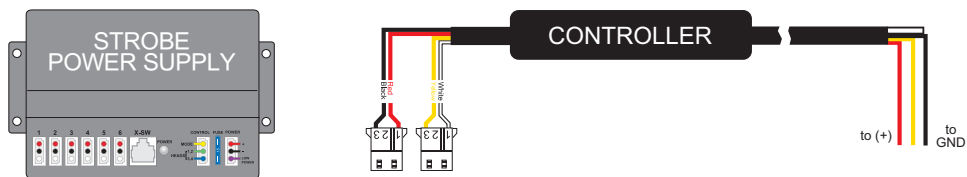

1. Disconnect strobe extension cables from strobe power supply.
2. Connect LED Kit connectors to strobe extension cables.

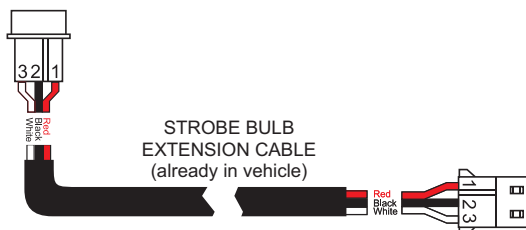

3. Remove & Disconnect Strobe bulbs from extension cables.



4. Insert & Connect LED Ligtheads to strobe extension cables.

NOTE: The wire colors of the LED Kit does not have to match the wire colors of the strobe extension cables.